

Mower Deck Care

Cutting Edge

KUBOTA's range of mower decks are perfectly designed to cut your lawn. The unique design of each deck improves airflow to discharge grass clippings and prevent grass spillage, to give your lawn that well manicured look.

Service Tips

1. Don't wash cutter decks immediately after use, because the deck is still warm, water will be drawn into the bearings – this will result in bearing failure.
2. It is best to clean the cutter deck with compressed air, or a garden blower.
3. If your cutter deck has grease nipples, grease these regularly, the grease lubricates bearings but also pushes old dust and moisture out of the bearing.
4. Some cutter decks have gearboxes filled with oil, check the oil level, (don't overfill) and check for oil leaks – these will need to be repaired
5. If your blades are cracked or worn (replace them).
6. If your blades are slipping replace the spring corn washers (these are designed to slip in overload).



KUBOTA Cutter Decks

- Don't wash decks with water immediately after use.
- Grease all grease nipples (if fitted).
- Check gearbox oil levels & repair oil leaks to prevent gearbox damage.
- Clean off mud, dirt and grass build up from under the deck, as this will impede air flow and affect the cutting performance.

KUBOTA Blades

- KUBOTA recommends blade replacement if your blades are;
- Cracked, split, chipped or broken.
 - **Warning:** Blades maybe unbalanced if sharpening is attempted - This may cause the blade to break or cause bearing / Cutter deck shell failures.

